

# MFNodeTrap\_SMS, User Manual

[www.mfnode.com](http://www.mfnode.com)

April 2013, Istanbul/Turkiye


# The Team

- **Design and Implementation**
    - Ates Yurdakul, atesh@puaga.com, Application and User Interface
    - Reha Yurdakul, [reha@rehayurdakul.com](mailto:reha@rehayurdakul.com), IT Architect, IBM Tur
-

# Contents

- MFNodeTrap\_SMS
    - Device
    - Capabilities
    - Additional parts
    - Important notes
  - Usage
    - Charging
    - Usage of Trap
    - When “not in use” ...
  - In case of problem
    - Possible problems
  - Contact
-

# MFNodeTrap\_SMS

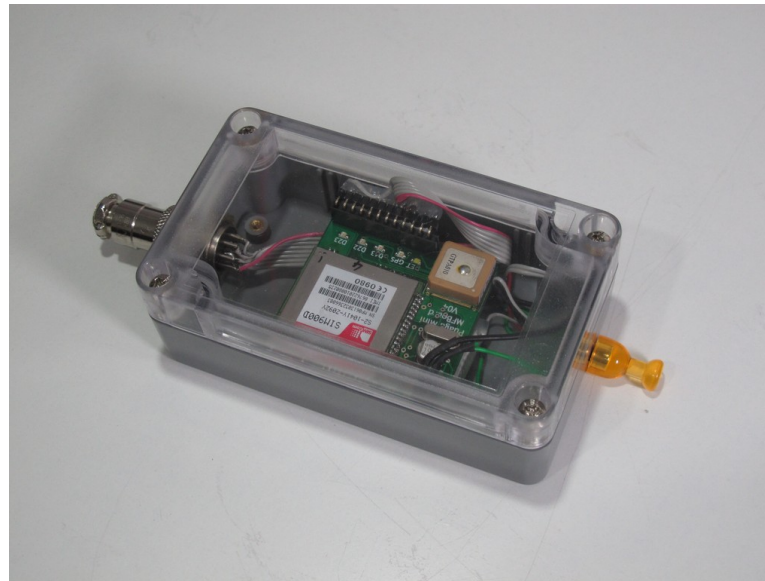

# Device

- Device is designed to send SMS to “predefined GSM number”, when magnet removed from “marked” area
  - In order to avoid “in expected activities”, also a “activation key” had been included
  - Device also contains a charging capability for the internal battery from any USB source, but special cable is required
-

# Capabilities

- It being activated, when “magnet removes” from marked area on the box
  - It does not consumes any energy as long as “magnet” is placed or “security key” not inserted
  - The box itself is water-resistive
  - The GSM number and message can be changed (by customization)
-

# Additional Parts – Security Key

- This key had been included, in order to avoid activation of the device when not required
- Unless that key inserted, device will never work



# Additional Parts – Key Magnet

- This device had been designed to operate, when this magnet had been removed from marked area
- In fact, this item is ordinary magnet
- Any kind of magnet can be used to replace this key which is suitable for your needs
- But, “very strong” Neodium magnets **SHOULD NOT** be used and can damage the devices permanently





# Additional Parts – Charger

- Charge device is 2 parts
  - Charge adapter
  - Special Charge cable
- When needed, any USB source (ie. USB port of notebook) can be used



# Important Notes


- When connection “Charge Cable” or “Security Key”, be careful to match “index” of both end



- Please try to use the charger supplied with device
  - Please remove the “security key” , when device is not in use
  - **Please monitor the device, when charge process in place**
-

# Usage of the Device


# Charging the Device

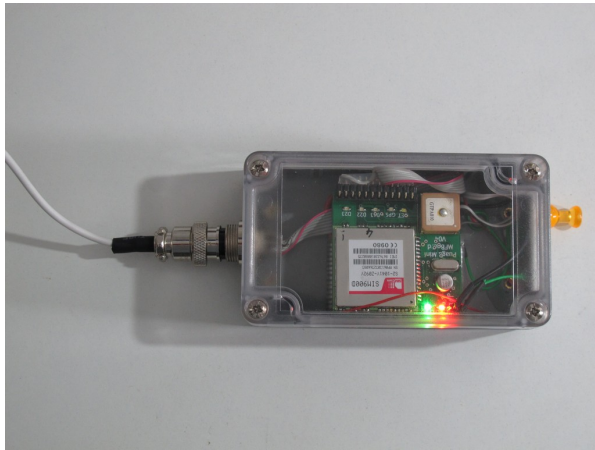

- **Device can be charged as shown in photo**
  - Charge cable connected
  - Key Magnet in place
- The Red light will be on, when charging is started
- The Green light will be on as long as charge in place
- When battery is completely charged, Red light will continue to be ON but, green light will be OFF
- **Please monitor the device, when charge process in place**

# Usage of device on Trap

- To use device, security key should be inserted. Otherwise, device will not start to work, even “magnet key” removed
- When device is ready, there is no Light is ON (in order to preserve energy)

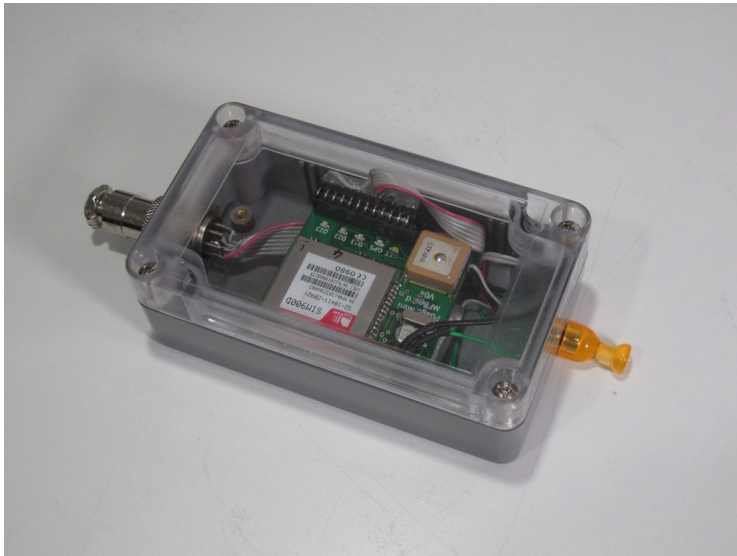


# Usage of device on Trap -2



- When Magnet is removed from Marked area, device starts to work
- When device started to work, compination LED will show the process
- If everything is OK, device will send predefined SMS to predefined number
- Then device goes into “sleep” mode

# Usage of device on Trap -3

- First, White LED will start to blink FAST
  - It shows that, GSM module is started
- First “RED LED” will light
  - This shows, CPU is started
- Second “RED LIGHT” will light
  - This shows that, device is connected to GSM Network and preparing the SMS
- Only 3rd “RED Light” will light
  - Shows that device sended SMS and in “sleep” mode

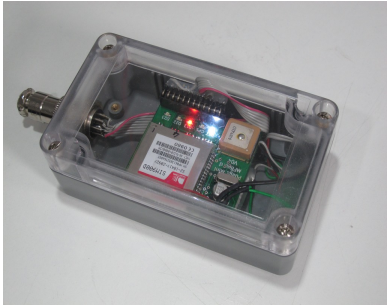



# When “not in use..”

- It is sufficient to remove “security key” from the device
- It is better to have battery FULL even not in use





# In case of a problem

# Possible problems

- 1. 1st RED Led is on but White LED is not
    - Battery is empty or faulty battery
      - **Please charge the device and try the device**
  - 1st RED LED is on, but WHITE LED is blinking fast and 2nd RED LED is not on sönmeye devam ediyor ve 2. Kırmızı LED yanmıyor
    - Possible, GSM Network is weak or invalid SIM card
      - **Simplest test is to call the GSM number which is written at the bottom of the device. If device is reachable, GSM Network is OK**
  - 1st RED led is ON, WHITE Led is blinking slowly but 2nd RED Led is OFF
    - Possible a “program error” in the device.
      - **Please remove and re-insert Security key**
  - 1st RED led is ON, WHITE Led is blinking slowly but 2nd RED Led is ON and stay like this ..
    - Possible a “program error” in the device.
      - **Please remove and re-insert Security key, also please try again in a place with better GSM Reception**
-

# Contact

[reha@rehayurdakul.com](mailto:reha@rehayurdakul.com)

[atesh@puaga.com](mailto:atesh@puaga.com)